

PRIMING PROCEDURE

IMPORTANT

All operations should be carried out on a clean bench, with clean hands in a clean area. Ensure that the oil is perfectly clean and free from air bubbles. Care **MUST** be taken at all times to ensure that no foreign matter enters the tool, as serious damage may result.

- Ensure that the air line is disconnected.
- Place the tool in an upright position, Oil Plug upwards.
- Unscrew Oil Plug with an Allen key and remove with Seal.
- Replace Oil Plug and Seal.
- Connect air supply and run functions a few times.
- Repeat the procedure 2-5 times until the oil is free from air.
- It is necessary to fit the appropriate nose equipment and adjust the tool stroke prior to operating the tool.

OIL DETAILS

The recommended oil for priming is Castrol Hispin AWS 32.

Complete Safety Data Sheet can be downloaded from www.castrol.com.

